

Installation Guide

安裝說明書


VEHICLE APPLICATIONS
適用車型

TOYOTA ALTIS 11th

PART NO. 7990

Contents 內含配件

1. Rear sway bar 後防傾桿 17mm 1PCS
2. Bracket 固定支架 (R/L) 2PCS
3. M10 flange bolt M10凸緣螺絲 4PCS
4. M10 flange nut M10凸緣螺帽 4PCS

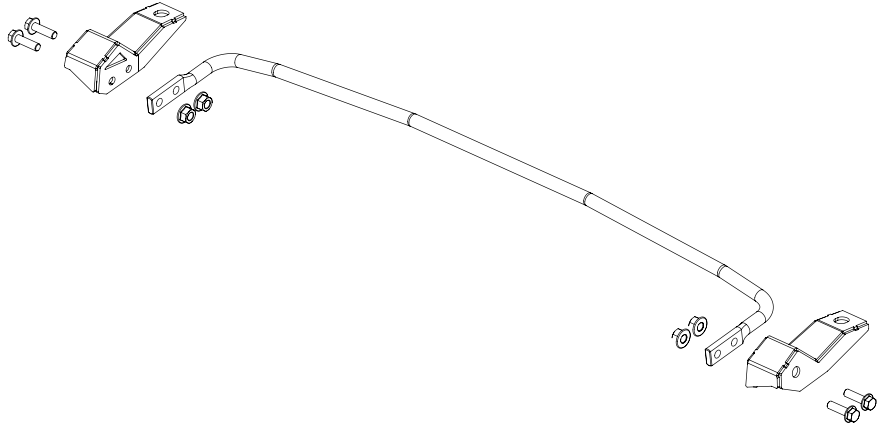

Installation tips 安裝方法



Remove the absorber bolts and torsion bar bolts.

拆卸後避震器下固定螺帽及扭力桿固定螺絲



Install two brackets (RH/LH) and sway bar.
The torque of torsion bar bolt is 180~200Nm

The torque of absorber bolt is 100~120Nm

安裝固定支架 (R/L) 及防傾桿

扭力桿螺絲鎖緊扭力 180~200Nm

避震器下固定螺帽鎖緊扭力 100~120Nm



Completion.

安裝完成圖