

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


HYUNDAI SANTA FE 3rd DM 2012-

PART NO. 8598

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Front Sway Bar 28mm 前防傾桿 1PCS
2. Bracket 專用固定座 2PCS
3. Stabilizer Bush 防傾桿橡皮 2PCS
4. Rubber Lock Ring 橡膠環 2PCS
5. Stainless Steel Clamp Ring 鐵束環 2PCS

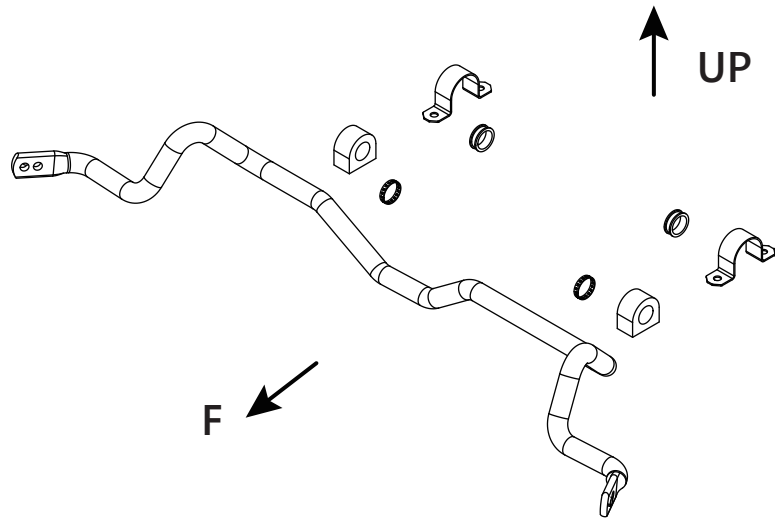

Installation tips 安裝提示

※ Please read the HARDRACE Tech Tips before installing the products.
在安裝之前請詳閱 HARDRACE 技術提示



Removal of front cross-member is suggested for easier installation.
建議拆卸前工字樑，以便更換防傾桿



Lock rings should be placed at the inner side of stabilizer bushes.
Apply clamp plier to lock the clamp ring as tightly as possible.
橡膠環建議安裝在內側，使用束環鉗，完成固定



Stiffness Adjustable
可調軟硬



Alignment is required after installation.
安裝完成後，請務必使用電腦四輪定位，確保輪胎校準

Recommended Torque for bolts/nuts
螺絲/帽鎖緊扭力參考

| | |
|-----|-------|
| M8 | 60Nm |
| M10 | 80Nm |
| M12 | 90Nm |
| M14 | 140Nm |

Thread-locker gel is recommended.
建議使用螺絲防鬆膠

HARDRACE Tech Tips 技術提示

Warning! Risk of Death may be caused by vehicle slipping or toppling off the jacking platform.

警告! 在頂車機的作業下，車輛的滑動或倒塌可能會造成人員致命的危險

Motor vehicle mechanical knowledge is expected. In some country & states, fitment may only be legally performed by a licensed mechanic. Check the regulation in your area.

請預先了解車輛機械知識與檢察在您所屬的國家或區域地方是否需要專業技師執照才可執行更換安裝，以免觸法

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

