

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


TOYOTA SIENNA 3rd XL30 2011-on

PART NO. 7842

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Front Sway Bar 30mm 前防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS
3. Bracket 防傾桿固定座 2PCS

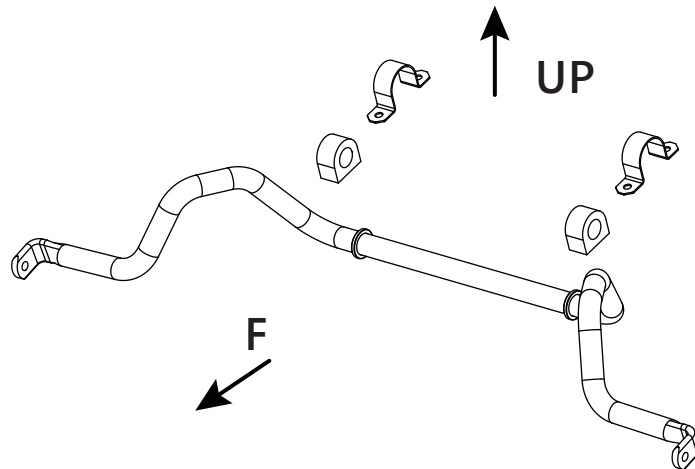

Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑



It is suggested to remove the sub-frame and left side knuckle assembly before installing. 4 wheels alignment is required after installation. (Steering wheel must be fixed steadily before removing steering gear to avoid any damage of Induction coil.)

建議先取出方向機總成及拆卸左側羊角總成，防傾桿以穿繞方式更換。安裝完成需電腦四輪定位校正（方向機拆卸前，務必方向盤固定，不可空轉，防止感應線圈斷線故障）



螺絲鎖緊扭力：

M8-60Nm

M10-80Nm

M12-100Nm

M14-160Nm

建議使用螺絲防鬆膠

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

