


Application 適用車型

Mazda 3/Axela '03-09 (BK)

Components 內含配件

① Strut brace 引擎室拉桿	1PCS
Bolt 螺絲 (M10x1.5x75)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

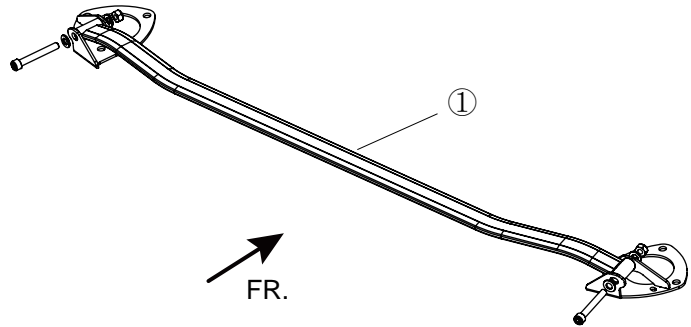


Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the bolts of strut mounts on both sides. Then locate the brackets of ① Strut brace onto the strut towers.

拆卸兩側避震器上座的所有螺帽，接著將 ①引擎室拉桿置於避震塔上。

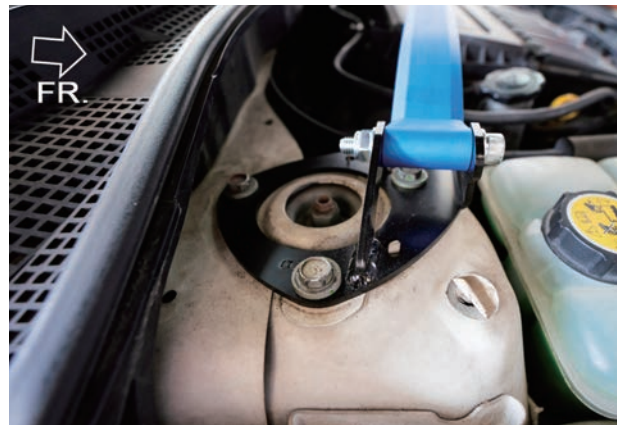

2. Once the strut brace is in place, reinstall all the nuts to the strut tower.

將拉桿固定於避震器上座之後，沿用原本的螺帽將拉桿鎖於避震器上座。



Illustration of installed state
完成示意圖