

Installation Instructions

安裝說明書

REAR ADD-ON SWAY BAR

後加裝型防傾桿


#Q0124

Application 適用車型

Suzuki Swift (ZC33) '17-present

Components 內含配件

① Add-on sway bar 防傾桿桿身 (17mm)	1PCS
② Upper Bracket-RH 上端支架-右	1PCS
③ Upper Bracket-LH 上端支架-左	1PCS
④ Lower Bracket A-RH 下端支架-右	1PCS
⑤ Lower Bracket-LH 下端支架-左	1PCS
⑥ Nut 螺帽 (M12x1.25-19x12)	6PCS
⑦ Flange nut 凸緣螺帽 (M10x1.25-14x9)	4PCS
⑧ Washer 華司 (24x13x2.6)	6PCS

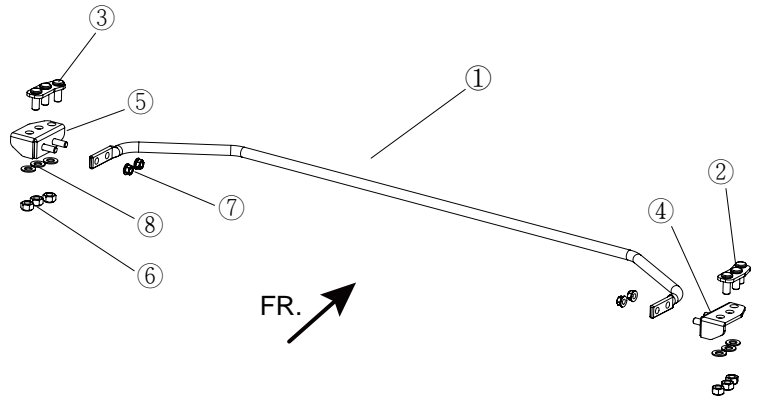

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Assemble the sway bar by placing the studs of ④ Lower bracket-RH and ⑤ Lower bracket-LH into the holes on both sides of ① Add-on sway bar, and tighten with supplied ⑦ Flange nuts.

首先組裝防傾桿，將 ④ 下端支架-右 及 ⑤ 下端支架-左 的螺柱使用 ⑦ 凸緣螺帽 鎖上 ① 防傾桿桿身 兩側的鎖孔。

2. Jack up the vehicle and support the rear axle with a jack stand to avoid springs from popping out. Remove the bolts securing the rear shock absorbers to axle beam on both sides, then place ② Upper bracket-RH & ③ Upper bracket-LH into the holes as shown in figure 2.

將車輛升起並將後軸頂住以防止彈簧彈出。拆卸固定後減震筒於後軸的螺絲，並依照圖表二將 ② 上端支架-右 及 ③ 上端支架-左 置入孔中。

Note 提示

- Be careful of ABS wires and brake hoses. 安裝時請留意避免拉扯ABS及剎車管線。
- Torque specification 上鎖扭力值 M10-80Nm

3. Tighten the nuts back to the studs of strut mounts. 將上座螺帽鎖回避震器上座的螺柱。

Note 提示

- Torque specification 上鎖扭力值 M12-100Nm

